

Dräger X-plore 8300 PAPR

How to use

1. Visual inspection



Check all components, especially the filter sealing, for damage. Only use the device if it is in perfect condition.

2. Attaching the filter



Place the particle filter at a 30° angle on the device's bayonet mount, then turn it clockwise until you hear it click into place.

3. Checking the battery status



To check the battery status when the device is switched off, briefly press the blue button on the control panel. If necessary, charge the battery before use.

4. Assembling the spark arrestor



If required, fit the optional spark arrestor, which also functions as bump protection, by placing it around the filter like a frame.


5. Preparing the belt carrying system



Remove the plug and the front belt clip.



Guide the free end of the belt on the back of the device through the two belt loops.

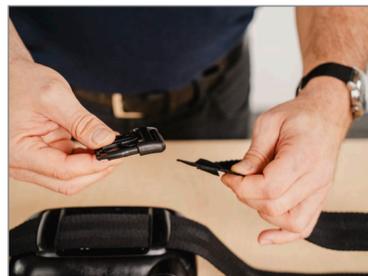

Reassemble the buckle by first threading the belt through the front opening on the plug from below, and then back through the rear opening from above.



Reassemble the belt clip and ensure that the two buckles can be pushed together without twisting the belt.

6. Preparing the backpack carrying system (alternative)



Open the buckle on the carrying system by pulling the end of the belt upwards.



Thread the belt first through the upper and lower belt loops on the device, then through the support strap on the carrying system.



Pull the end of the belt through the buckle and close it with a little pressure.

7. Connecting the breathing hose



Connect the breathing hose. Turn and press it gently until you hear it click into place. Connect the hose to the headpiece.

8. Donning the carrying system



With the backpack carrying system, thread the breathing hose through the hose holders before connecting it to the headpiece.



Put on the respective carrying system and close the buckle. Adjust the system for a proper fit, and secure the belt ends if necessary.

9. Starting the device



Press and hold the blue button on the control panel for two seconds to switch on the device. Once the device completes its automatic self-test, you can adjust the airflow by briefly pressing the blue button.

10. Donning the headpiece



Fit the headpiece. See separate instructions.